

Dear Customer,

This Quick Start Guide is enclosed with detailed dishwasher Operating Instructions. Before using the appliance carefully read the Operating Instructions, especially guidelines for safe use.

Before plugging your dishwasher into the mains power, remove the safety packaging. Do not start the dishwasher before it is properly set up.

1 Turn on the appliance

- Close the door, press the Power button.

2 Dispense detergent

- Press the latch to open the detergent dispenser.
- Add detergent to the dispenser.

3 Check the special salt level

- Add special salt to the dispenser when the corresponding indicator on the control panel comes on.

4 Load the dishes

- Remove food leftovers from the dishes
- Place the dishes in the baskets according to loading guidelines.
- It is recommended to load the lower basket first, then the upper basket.

5 Select the wash programme

- Choose a program, the response light will turn on. Then press the Start/Pause button, the dishwasher will start its cycle.

6 Start your dishwasher

- Close the dishwasher door.
- The dishwasher will start a wash programme.

7 Turn off the appliance

 
 
- Turn off the appliance using the [on/off] button

8 Remove dishes from the appliance

- When the dishwasher is off, open the door and wait about 15 minutes before removing the dishes. This will also facilitate the drying process. Hot dishes are more susceptible to cracking.

9 Features and components


- Spray arms
- Cutlery basket
- Upper basket
- Inner tube
- Lower basket
- Salt container
- Detergent dispenser
- Mugs and cups shelves
- Main filter
- Water supply hose connection
- Water drain hose
- Door hinge adjustment

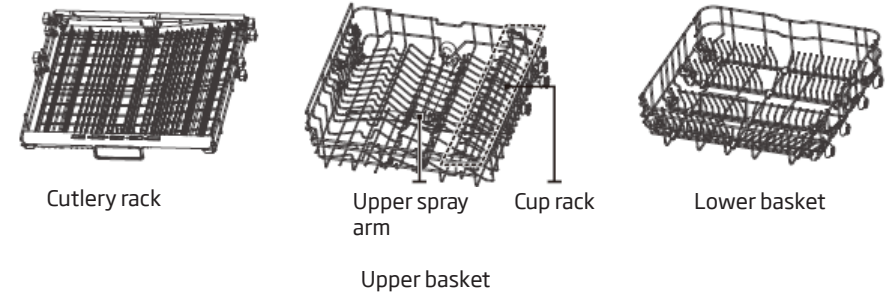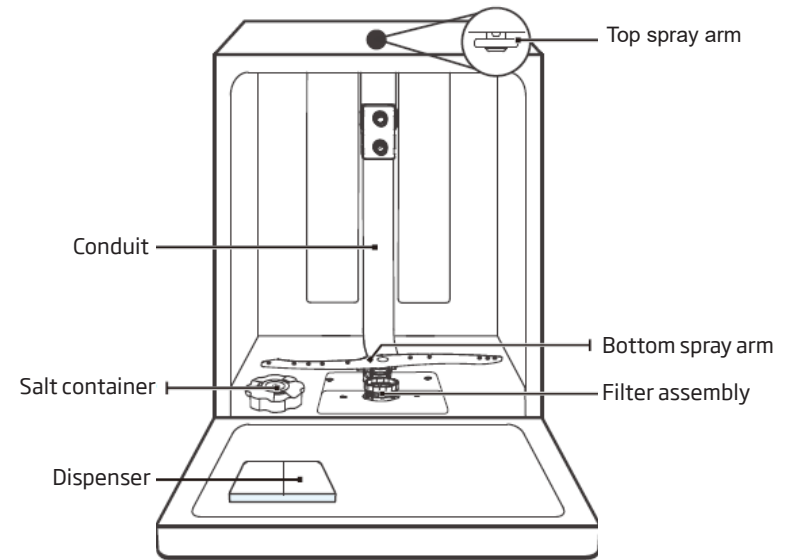

NOTE: Figures are for illustrative purposes only Individual models may vary.

TABLE OF WASH PROGRAMMES: **ZWM 627 WEA/ ZWM 627 IEA**

| Programme name | Auto | Intensive | Universal | **ECO | Glass | 90 min | Quick |
|---------------------|--|---|--|--|--|---|--|
| Temperature | 55-65°C | 65°C | 55°C | 45°C | 50°C | 60°C | 45°C |
| Type of soil | Automatic sensing wash cycle Lightly, normally or heavily soiled crockery, with or without dried-on food | For heaviest soiled crockery, and normally soiled pots, pans, dishes etc with dried on soiling. | For normally soiled crockery, such as pots, plates, glasses and lightly soiled pans. | This is standard programme for cleaning normally soiled tableware and it is the most efficient programme in terms of its combined energy and water consumption for that type of tableware. | For lightly soiled crockery and glass. | For normally soiled loads that need quick wash. | A shorter wash for lightly soiled loads. |
| Soil level | Different levels | Heavily soiled | Normal soil | Light soil | Light soil | Light soil | Light soil |
| Amount of detergent | 4g /18g (2 pieces) | 4g /18g (2 pieces) | 4g /18g (2 pieces) | 22g (2 pieces) | 4g /18g (2 pieces) | 4g /18g (2 pieces) | 20g (1 piece) |

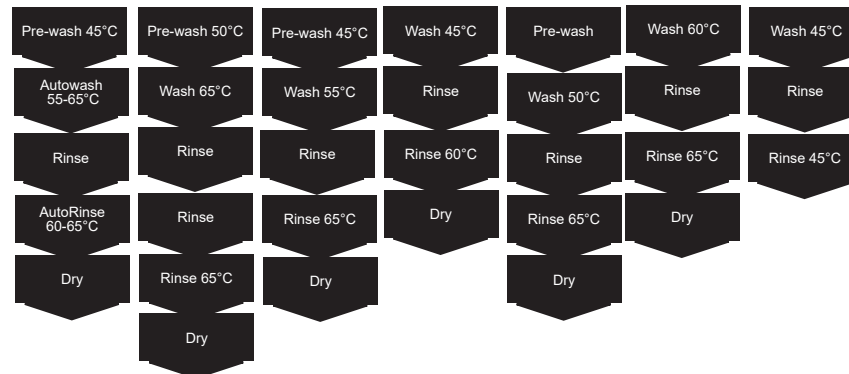 

| | | | | | | | |
|---------------------------|-------------|-------|-------|-------|-------|-------|-------|
| *Programme duration [min] | 85-150 | 205 | 175 | 230 | 120 | 90 | 30 |
| *Energy consumption [kWh] | 0.921-1.302 | 1.579 | 1.268 | 0.951 | 1.094 | 1.079 | 0.753 |
| *Water consumption [l] | 10.0-15.0 | 18 | 13.8 | 10 | 14.1 | 11.7 | 11.2 |

** Standard programme This is a reference program for research institutes. Tests according to EN 60436. This programme is suitable for washing normally soiled tableware. This is the most effective programme taking into account the total energy and water consumption for this kind of tableware.

* Programme duration, energy and water consumption value given in the table have been determined under laboratory conditions. Actual values can vary.